



Maxitrol GV60 Remote Quick Start Guide

To select mode: Press SET button to scroll through selections.

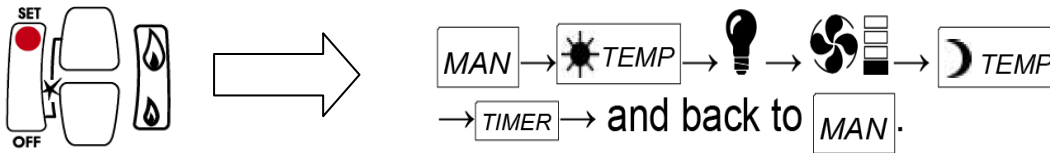

To Set Clock: Simultaneously press and hold the large and small flame buttons. When the time flashes, press the large flame button to set the hour. Press small flame button to set the minute. Press OFF or simply wait to return to manual mode.

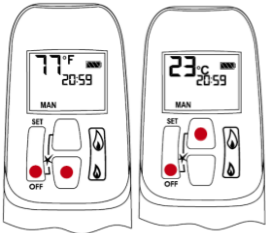

To Select C or F: Press OFF and small flame buttons simultaneously and hold until screen switches. Repeat to switch back.



To Manually Increase or Decrease Flame (Manual Mode): Place Remote in Manual Mode by pressing SET button until MAN icon shows on LCD. Press LARGE FLAME button to increase or SMALL FLAME button to decrease flame. Press either twice in rapid succession and the stove will automatically turn up to pre-set HI or down to pre-set LO.



To Start Stove Manually: Simultaneously press the OFF and large flame buttons until a short beep confirms the start sequence has begun; release buttons. Continuing beeps confirm the ignition is in process. Once pilot ignition is confirmed, the main burner will ignite and the handset will automatically go into manual mode.



To Turn ON and OFF Split Flow Valve (Front Burner if so Equipped): Simultaneously press SET and LARGE FLAME button to turn valve on, simultaneously press SET and SMALL FLAME buttons to turn off.

To Use Program Modes: **NOTE:** Use of program modes is required to operate your stove by thermostatic control. Two modes are available to the user, Daytime and Nighttime set temperatures and a fully programmable mode. Please refer to your user manual for detailed instructions on configuring and using these modes.