

DEVA
Model 8220



hearthstone
the HEART of YOUR HOME

Parts List:

1	BASE: FIREBOX SUPPORT,DEV	2110-706
2	BRACKET: REFRACTORY,DEV	5170-010
3	DOOR: ASH ASSEMBLY,DEV	91-58712
4	DOOR: OVEN ASSEMBLY,DEV	91-58711
5	DOOR: FIREBOX ASSEMBLY,DEV	91-58713
6	FRAME: S/S TOP GLASS,DEV	5170-001
7	FRONT: LOWER CAST BLACK,DEV	2250-200
8	GASKET KIT: DEV	92-58202
9	GRATE: ASH,DEV	2110-705
10	GRILL: TOP COOKING,DEV	2150-705
11	HAND RAIL: 22MM BAR (SMALL), DEV	5170-007
12	HAND RAIL: 30MM BAR (LARGE), DEV	5170-008
13	HANDLE: FIREBOX DOOR, DEV	91-71711
14	HANDLE: ASH DOOR, DEV	91-71712
15	LATCH: KIT, ASH AND LOAD DOOR, DEV	92-73205
16	MANUAL: OWNER'S,DEV	6400-40460
17	PAN: BOTTOM / DRIP, DEV	5922-010
18	PANEL: FIREBOX FRONT,DEV	2110-707
19	PANEL: FIREBOX REAR,DEV	2110-708
20	PANEL: SIDE ASSEMBLY,DEV	91-59710
21	PIN: HINGE,BOTTOM ASH DOOR, DEV	4300-0185
22	PIN: HINGE,BOTTOM LOAD/TOP ASH DOOR,DEV	4300-0183
23	PIN: HINGE, TOP LOADING DOOR, DEV	4300-0180
24	PLATE: FLUE,DEV	2150-700
25	PLATE:CLEANOUT COVER ASSEMBLY,DEV	91-58714
26	RACK: OVEN , DEV	5922-011
27	REFRACTORY: LEFT,DEV	3060-433
28	REFRACTORY: RIGHT,DEV	3060-434
29	REFRACTORY: BASE, DEV	3060-432
30	SPACER:DOOR, X/X" IDX X/X" ODX1/8" T DEV	4700-0855
31	SUPPORT: 22MM HAND RAIL (SMALL),DEV	5170-005
32	SUPPORT: KIT 30MM HAND RAIL (LARGE),DEV	92-49200
33	THERMOSTAT: CHROME, ANALOG, DEV	7200-515
34	TOOL: POKER, DEV	5922-005
35	TOOL: SCRAPER, DEV	5922-006
36	HANDLE: OVEN DOOR ASSEMBLY	91-71710

DEVA
Model 8220



hearthstone
the HEART of YOUR HOME

Parts List:

p. 2

1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	
18	
19	
20	
21	
22	
23	
24	
25	
26	
27	
28	
29	
30	
31	
32	
33	
34	
35	

DEVA

Model 8220





hearthstone

the HEART of YOUR HOME

Parts List:

p. 3

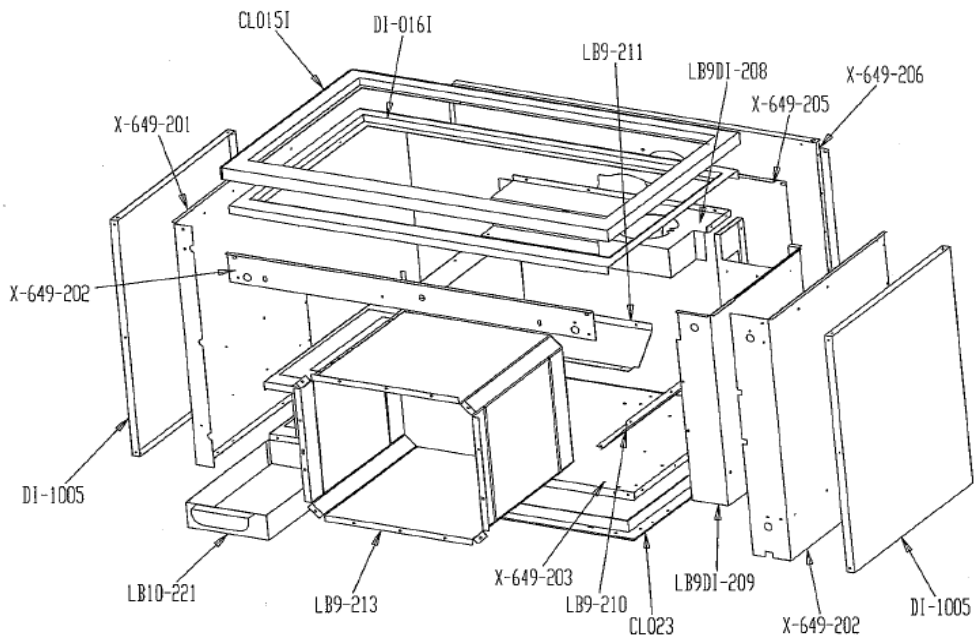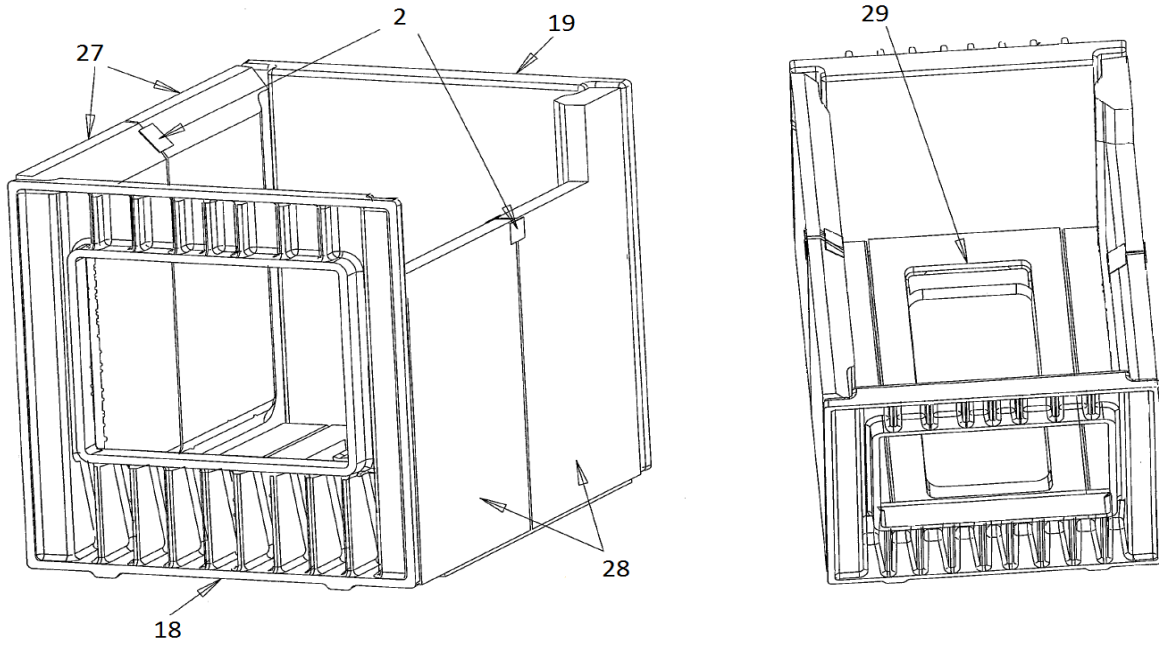

DEVA

Model 8220



hearthstone

the HEART of YOUR HOME

Parts List:

p. 4

