



Technical Data Sheet

Stove Name Deva 100

Removal / Replacement of the Doors and Hinge Pins

Publish Date: 11/18/2015

INCLUDED IN KIT:

None

TOOLS REQUIRED:

Flat Screwdriver or Knife

PROCEDURE:

Use a flat screwdriver or knife blade to pry up the top hinge pin. Lift it up and off the stove.



Slightly lean the firebox door so that you can lift it off the bottom hinge pin.



Now lift out the pin from the lower hinge on the firebox door. This is also the pin in the top of the ash door.

Now lean the ash door slightly so that it can be lifted off and removed.



You now have access to the lower pin for the ash door, if necessary.

