



Technical Data Sheet

Installing the Primary Air Control Slider

Part Number 2410-710

Publish Date: 6/22/2004

MATERIALS REQUIRED:

2410-710 Primary Air Control Slider

TOOLS REQUIRED:

Ratchet Strap
7/16" Wrench Or Socket
Phillips Screwdriver

PROCEDURE:

- 1) Remove the steel heat shield on the back of the firebox by first removing the screws with the phillips screwdriver.
- 2) Remove all the components from the firebox (all refractory stones and the baffle/secondary air plenum).
- 3) Wrap the ratchet strap around the body of the firebox and tighten the strap.
- 4) Using the 7/16" wrench or socket, remove the hex head bolts that hold the firebox to the bottom of the stove.
- 5) Lift the strapped portion of the firebox off of the firebox base.
- 6) Fit the Primary air control slider into the front of the bottom casting. Position it so that the mounting hole fits over the right air intake opening on the base.
- 7) Using the shoulder bolts and washers provided, attach the handle to the pivot point on the bottom of the stove and the air slider.
- 8) Place the firebox walls back onto the stove and secure them with the 1/4" hex head bolts.
- 9) Install the firebox refractory stones and baffle (see instructions that accompany the stove).