


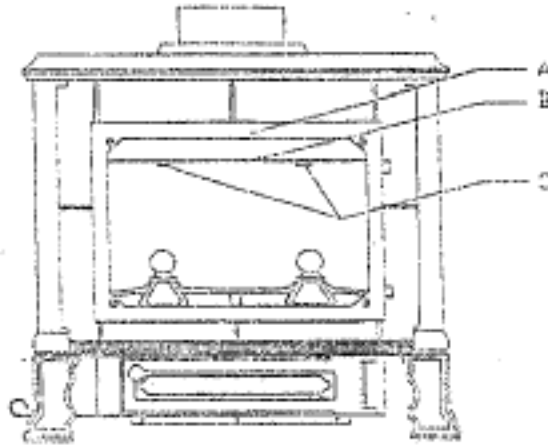

HERITAGE NON-CATALYTIC WOODSTOVE Proper Setting of the Adjustable Air Wash

1. Open the front door and identify all the labeled components in the illustration.
 - (A) Front Door Frame
 - (B) Air Wash Control
 - (C) 1/4" - 20 Hex Head Bolts (used to secure the air wash in its final setting)
2. Using a 7/16" wrench, loosen the bolts (C). Pull the air wash control (B) out until it extends beyond the front door frame (A). Snug, but do not fully tighten the bolts (C). The air wash control (B) now should move with minimal resistance.
3. Close the front door (A). This will push the air wash control (B) into its proper position (1/16" recessed from the front frame). Using the 7/16" wrench, tighten the retaining bolts (C) to hold the air wash (B) in this position.

If the air wash is recessed further into the stove, it will cause a sluggish performance. Pulling it out to far will prevent the door from closing.



HearthStone Quality Home Heating Products

317 Stafford Ave., Morrisville, VT 05661, www.hearthstonestove.com

C:\Documents and Settings\rvlahos\My Documents\Hearthstone\Technical Manual\TECH\Heritage\Non-Catalytic Model 8020\Heritage Model 8020 Air Wash Adjustment.doc