



Technical Data Sheet

Installation of the Equinox Viewing Screen

Assembly 90-69000

Publish Date: 5/14/2008

KIT CONTENTS:

(1) Spark Screen w/ Knob

TOOLS REQUIRED:


None

BEFORE YOU BEGIN: Install retainer to screen. Turn threaded rod into screen through the tab on the top inside of the screen. Turn nut and knob onto the threaded rod outside the screen and adjust to fit screen tight to doorframe.

PROCEDURE:

1. Start with the screen handle at the top, and facing you.
2. Turn the knob counterclockwise until the tab on the back of the screen is in the 6 o'clock position.
3. Open the door on the stove.
4. While holding on to the screen handle, place the lower edge of the screen onto the lower edge of the front door frame (Ensure you place the screen's legs behind the lip of the door opening).
5. Push the top of the screen toward the stove until the top of the screen makes contact with the insert door opening.
6. Turn the screen handle clockwise until the screen is securely locked onto the unit. The tab on the back of the screen should be approximately in the 12 o'clock position.

USAGE HINT: Allow the stove to burn briskly before attempting to use the screen. This will allow the draft to strengthen and decrease the possibility for smoke spillage.

 Warning: Do not over-fire the stove! If you have an unusually strong draft, install a damper in the chimney connector pipe to avoid damaging your stove or chimney.