

Technical Data Sheet

Replacing The H-II Back and/or Side Plates

Back Plate #92-58240 / Side Plate #92-58241

Date: 9/19/2012 Page: 1 of 2

KIT CONTENTS:

TOOLS REQUIRED:

92-58241 Side Plate Assembly:	7/16" Socket
1-#2211-27: Side Plate	7/16" Wrench
4-#4600-0300: 1/4" Flat Washers	Power Drill
2-#4500-1200: 1/4"-20 X 1-1/4" Bolt	1/4" Drill Bit
2- #4200-0300: 1/4"-20 Reversible Lock Nut	

92-58240 Back Plate Assembly:

1- #2211-26: Back Plate	7/16" Wrench
2- #4600-0300: 1/4" Flat Washers	7/16" Socket
1-#4200-0300: 1/4" Reversible Lock Nut	Power Drill
1- #4500-1200: ¼"-20 x 1" Bolt	1/4" Drill Bit

1-#4500-0920: 1/4"-20 x 1-1/4" T-Cut Screw

NOTE

Side Plate: In older models, the side plate is bolted to the back plate. This bolt has been eliminated in production. It does not require replacement.

Back Plate: In older models, the right hand side bolt may need to be re-drilled. Use a 1/4" drill bit after marking the new holes location while the plate is in position.

PROCEDURE

Side Plate Removal:

When removing the back and side plates, the side plate must be taken out first. Remove the $1 \frac{1}{4}$ "-20 bolt that joins the two plates. Use a $\frac{7}{16}$ " socket and wrench.

To remove the plate, remove the two 1/4"-20 X 1 1/4" bolts that hold the side plate to the bottom cast. Use a 7/16" socket and wrench. The two hex nuts can be located underneath the stove.

Page: 2 of 2

Back Plate Removal:

Review the instructions for side plate removal. If only the back plate is to be removed, it is not necessary to remove the side plate.

Remove the right hand side, 1/4"-20 X 1 1/4" bolt that holds the back plate to the bottom cast. Use a 7/16" socket and wrench. The hex nut can be located underneath the stove.

The left hand side, 1/4"-20 X 1" bolt is threaded into the bottom cast. Remove it with a 7/16" socket wrench.

Side Plate and Back Plate Replacement:

Both plates may be replaced by following removal procedures in reverse order.

PRODUCT NOTICE

Pre-drilled holes in the plates are used in the painting process. They do not have a bearing on the repair procedure.