

# Technical Data Sheet

## Installation of the Tucson 8700, 8701, 8720 & 8740 Glass Kit *Assembly 97-58705 Tucson Glass Replacement Kit*

**Date:** 11/7/2012

**Page:** 1 of 2

### **Glass Kit #97-58705:**

5.25 Feet - 3/4" Flat Tape Gasket (#3160-080)  
1 - Ceramic Glass (#3030-027)

### **Tools Required:**

Scissors  
5/23" Allen Wrench  
Phillips Screwdriver  
Penetrating Oil

**Before You Begin:** Work on a cool stove. Turn the stove to the off position to prevent it from starting while you are working on the stove.

### **Procedure to Replace the Glass & Glass Gasket:**

Follow this procedure to replace the glass on all models of the Tucson gas stoves except the Tucson noncatalytic vent-free model.

1. Open the front door by removing the phillips head screw or socket head bolt. Remove the door by lifting it straight up off the hinges with the hinge pins remaining in the door. Place it face down. (Use a soft surface for enameled doors.)

**Hint:** With the door in this position apply penetrating oil to each of the retaining screws in the glass frame before attempting to remove the screws.

3. With the phillips screw driver, remove the window frame screws to separate the window frame from the door.
4. Carefully lift the original glass from the door.

5. Peel the paper backing from the backside of the flat gasket, a small amount at a time. Wrap the tape around the outside edge of the glass, overlapping both the front and back of the glass.
6. Place the gasketed glass back into the door and screw the glass retention frame back onto the door to hold the glass in place.
7. Install and close the door. Secure the door by turning in the screw or socket head bolt with a phillips screwdriver or allen wrench.