

## Technical Data Sheet

### Installing the Flue Collar on the Bari 8170 Wood Stove

**Publish Date: 9/4/2007**

#### **COMPONENTS:**

1- Rotating Flue Collar  
3- 5mm Hex Head Screws


#### **TOOLS REQUIRED:**

5mm Hex wrench

**BEFORE YOU BEGIN:** The Bari Flue Collar is shipped separate from the stove for packaging purposes. This simple installation should be done by a qualified technician. This collar must be installed before the stove is used.

#### **PROCEDURE:**


1. Locate the flue collar.
2. (The screws that mount the collar are shipped in place) Using a 5mm hex wrench, remove these 3 screws on the top of the stove.
3. Place the collar in place (see figure 1). Using the hex wrench, install the 3 screws to mount the collar in place.

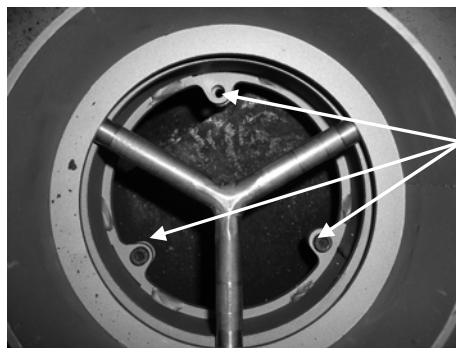

Install these 3 screws.

**Figure 1**

4. Place the top stone over the collar as shown in figure 2.

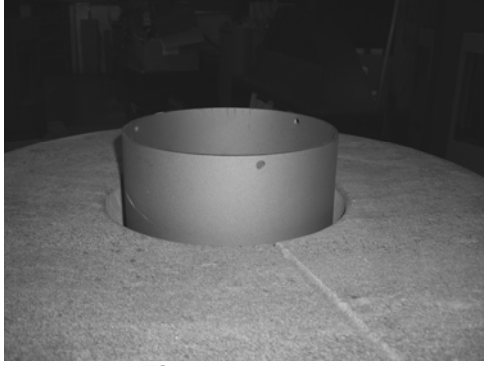

**Figure 2**

5. Install the stove pipe of your choice - use 3 screws to secure it to the flue collar.