

Technical Data Sheet

Tudor Model 8120 Curio Installation Kit

Kit #91-8220010-Matte,

Kit #91-8220020-Brown

Kit #91-8220022-Caramel

Kit #91-8220059-Blue/Black

Publish Date: 4/14/2005

Kit Components:

<u>QTY</u>	<u>Description</u>	<u>HS Part #</u>
4-	Panel, front and side	2110-296
1-	Panel, front lower	2110-292
2-	Panel, side lower	2110-294
2-	Ceramic heat shield	3120-124
1-	Left heat shield retainer	5120-053
1-	Right heat shield retainer	5120-054
8-	10-24 x 3/8 Type "F" screws	4500-3436

Tools Required:

-Phillips screwdriver
-For enamel installations, cardboard or a heavy paper is suggested



Figure 1 - Tudor with Curio Panel Set

Ensure the Tudor is cold before attempting to install the Curio panel set.

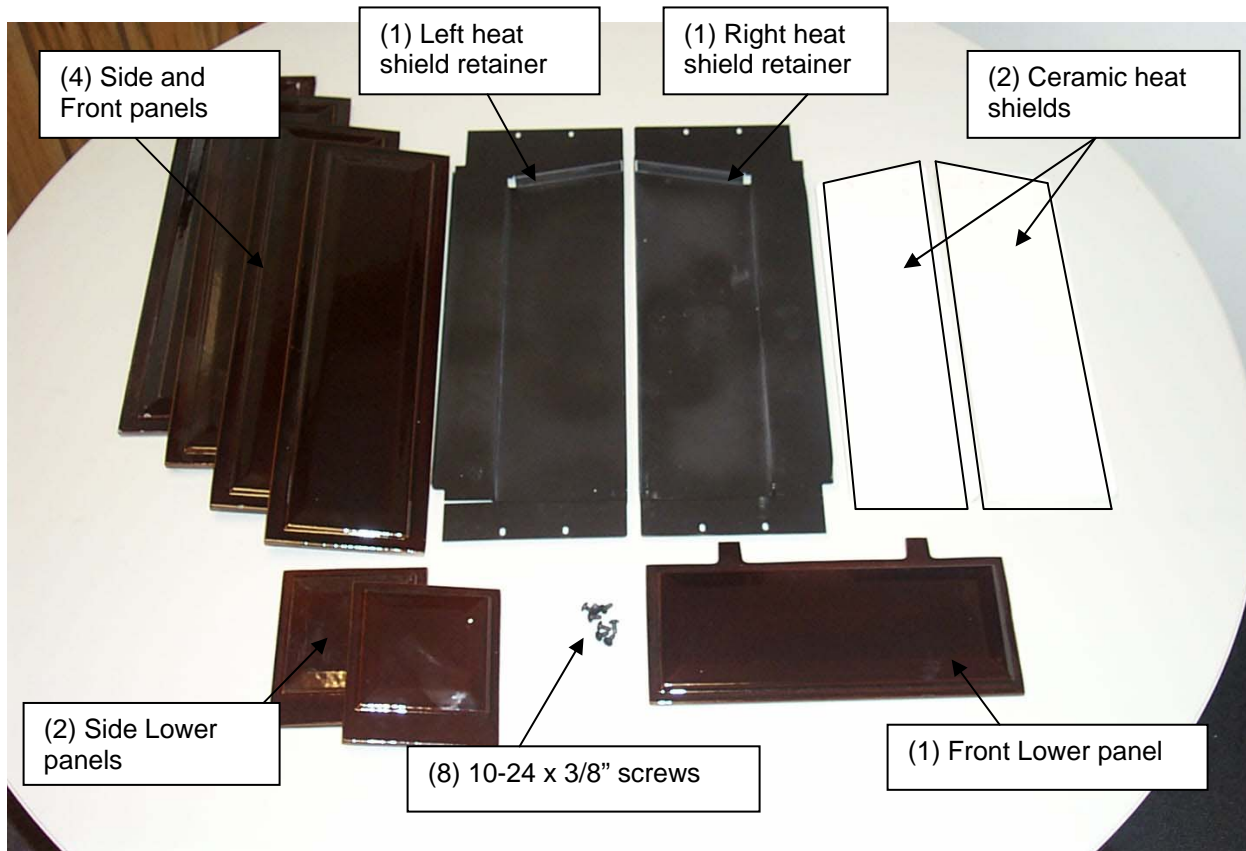


Figure 2 - Curio Components

PROCEDURE:

1. Open the front cast doors. (In order to safely install the Curio Panel set, you must remove the front doors) To do this, simply pull up on the doors and they will slide up, off their hinges posts.
2. Lay the doors down on a soft, scratch resistant surface, such as carpet.
3. Locate and place one of the **ceramic heat shields** in the **Left heat shield retainer**. Next, place one of the **Side/Front Panels** in the left door with the finish surface down.
4. Flip the retainer with the ceramic panel over and place it over the Left door and **Side/Front Panel**.
5. Using four of the **10-24 x3/8\"** screws, mount the retainer to the door.
6. Repeat this process for the right side.
7. Once both doors are completed, place them both back on their hinges and close them.
8. Locate and remove the four screws holding the rear heat shield on. Set the heat shield aside for reattachment later.

9. Locate the 2 **Lower Side panels**. From behind the unit, they slide into the channel at the bottom of the frame. (Use cardboard or a heavy paper between the panel and the stove to help keep the panel surface from scratching during installation) Slight tension is all that is needed to keep these in place. (See figure 3)

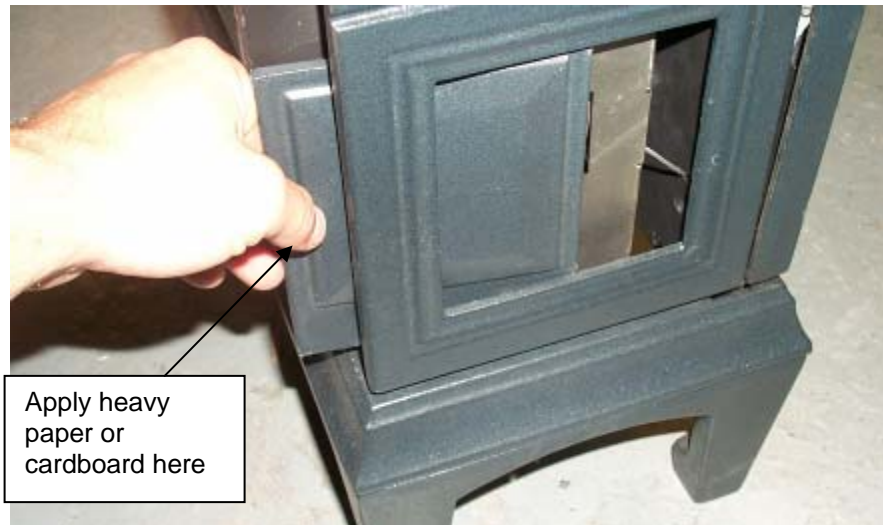


Figure 3 - Curio Small Panel Installation

10. Also from behind the unit, slide two of the longer **Side/Front Panels**. These too, only use tension to remain in place. (See figure 4) (Again, use cardboard or a heavy paper between the panel and the stove to keep the panel surface from scratching during installation).



Figure 4 - Curio Side Panel Installation

11. Open the lower control door. Remove the four screws holding the lower front retainer in place. Pull the retainer away from the door. (Take note of the placement of the cable clips. These are installed to keep the cable in place when opening and closing the door)

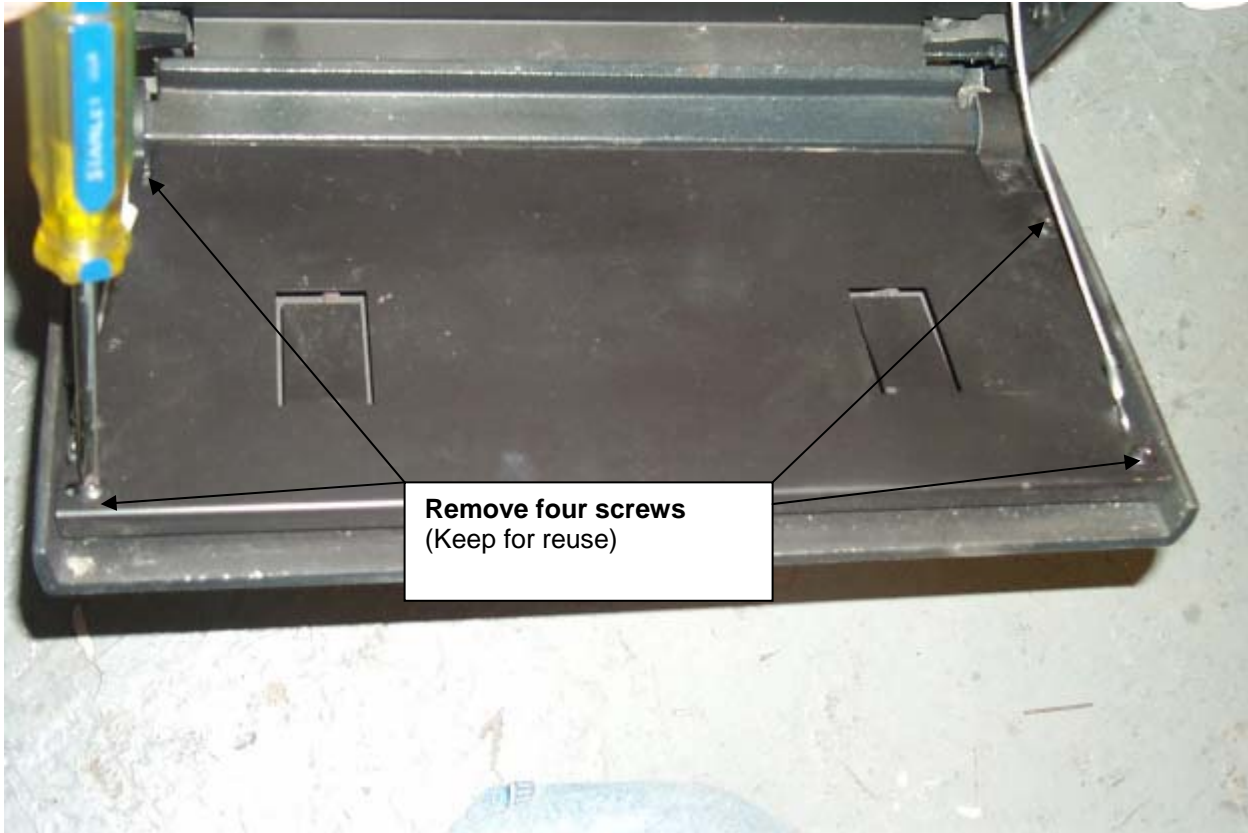


Figure 5 - Curio Front Lower Panel Installation

12. Locate and place the **Lower Front Panel** into the door. (The two tabs on the panel are at the bottom. They are used to help hold the panel when installed).
13. Replace the retainer and the four screws. Close the lower control door.
14. Enjoy your stove!