

## Technical Data Sheet

### Lock-down Kit Installation Instructions for the Bari Wood (8170) *Kit #91-99400*

Publish Date: 10/29/2007

**KIT CONTENTS:**

1-Lock-down plate  
1-Instructions


**TOOLS REQUIRED:**

4- Screws to mount plate to floor  
Screwdriver

If you are planning on using the Outside Air Kit (91-53700) (Mandatory in all mobile home installations) you must install this kit before proceeding with that installation.

**PROCEDURE:**


1. Unpack and locate **the Lock-down plate**.
2. Place this plate on the floor in the desired position of the stove with the tabs pointing up. (see Figure #1)

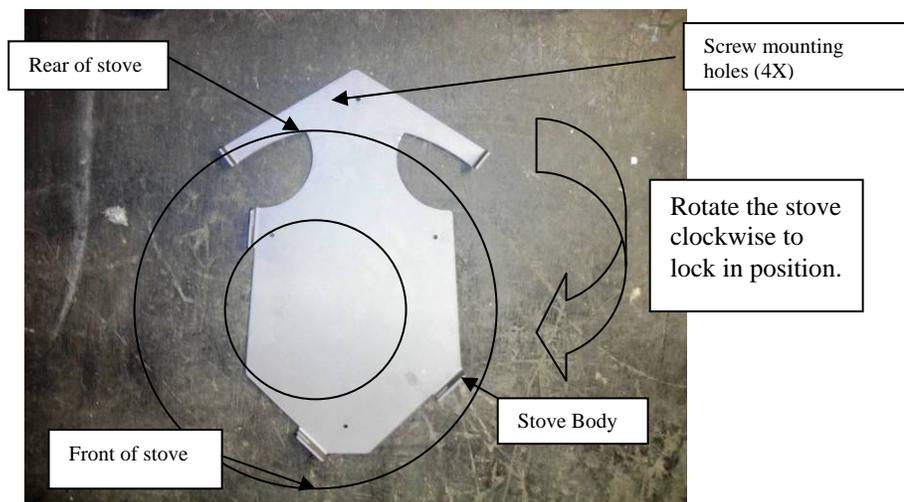

**Figure 1 Lock-down Plate**

3. Depending upon your floor material (stone, brick, wood, tile, etc.) Choose a screw that is strong enough to hold the Bari in place. The screw head must not be any thicker than 1/4" (If it is thicker, the stove will not lock down properly). Large sheet rock screws will work for wood flooring. Mount the plate to the floor with the 4 screws you have chosen.
4. Carefully set the Bari on the **Lock-down Plate** slightly counter-clock wise from center. (In order to complete the lock down, you will need to twist the stove back to center.

5. The back of the stove will rest against the rear two tabs. Rotate the stove clockwise until it stops. Your Bari is now locked in place. (Figure 2 shows the assembly on the bottom of the stove in the locked position.)

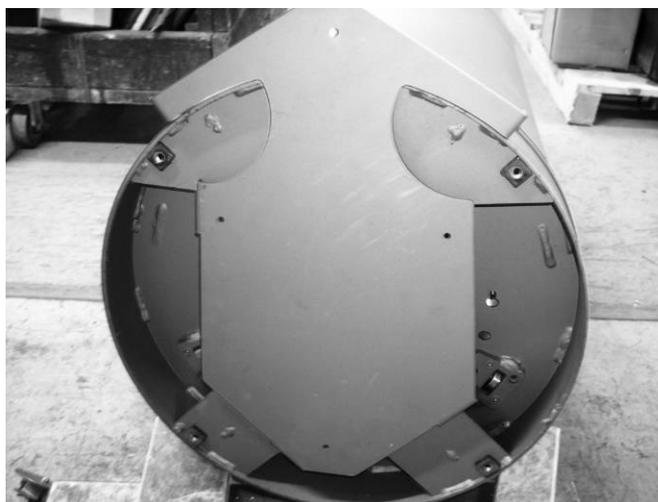

**Figure 2 Bottom View**