

Technical Data Sheet

Bari Wood (8170) – Stone Installation Instructions

Kit #9170-41

Publish Date: 5/3/2017

INCLUDED IN KIT:


- (4) #1141-700 Side Stones
- (1) #1141-820-148-V Top Stone

TOOLS REQUIRED:

- 10 mm Wrench
- 5/32" Allen Wrench
- Level

INCLUDED IN STOVE (In The Accessory Box):

- (2) Center Stone Clips (Shown Below)
- (3) Protective Silicone Caps (Shown Below)

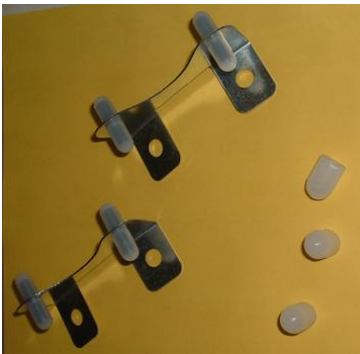

BEFORE YOU BEGIN: Verify that you have all the parts needed. Work on a cool stove.

PROCEDURE TO INSTALL THE SIDE STONES:

1. Unpack the stove and locate the connecting points where the side stones will fit to the stove. The locations are shown below.

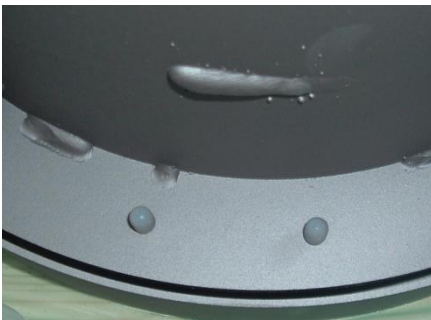


Photo: 1

Bottom Stone Tabs – On Base



Photo: 2

Center Stone Screws



Photo: 3

Top Stone Retaining Brackets

2. Install one of the side stones. The holes in the bottom of the stone will fit onto the two tabs on the base. Using the 5/32" allen wrench, remove the two screws in the center, just above the bottom stone (as shown in photo 4).
3. Place one of the center clips onto the side stone with the bottom tabs inserted into the holes in the top edge of the bottom stone (as shown in photo 5).

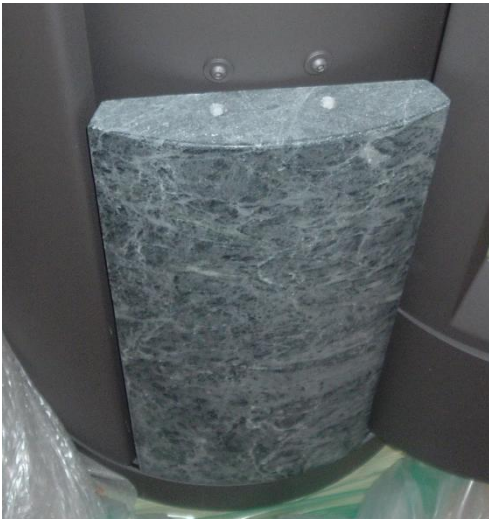


Photo: 4

Installation of the Bottom Stone



Photo: 5

Installation of the Center Stone Bracket

4. Using the 5/32" allen wrench, turn the center screws back into place to secure the center clips to the body of the stove.
5. Place the top stone onto the center clip. The holes in the bottom of the top stone will fit onto the tabs on the top of the center clip (see photo 5).

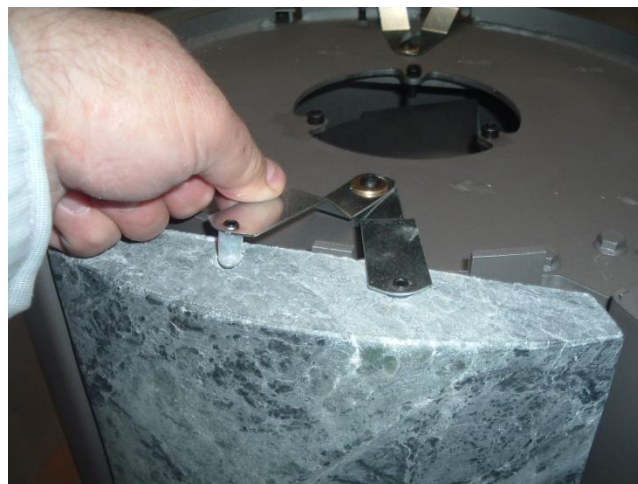


Photo: 6 - Set the top retaining tabs into the holes in the top stone.

6. Install the top clips into the holes in the top. There is some movement in the top clip. Push the top of the top stone in and while holding it, tighten the bolt to the top using the 5/32" allen wrench.
7. Repeat this procedure on the opposite side of the stove.

PROCEDURE TO INSTALL THE TOP STONE

1. Place the three protective silicone caps over the three flat head bolts on the top of the stove (see photo 7). The top stone ring will be placed onto these bolts. To level the top stone, these bolts can be turned in or out as necessary. Make sure that the top stone ring is installed high enough to allow the front door to open and close as will be needed to use the stove. Place the level on the top stone and fine tune the height until the stone is level. Once the stone is level, remove it from the top and tighten the nuts down to the surface of the stove top with the 10mm wrench to hold the level position. Carefully set the top stove ring back in place on the top of the stove orienting the cut in the stone to the back. Center the stone on the top.



Photo: 7

Place the protective caps onto the screws that will hold the top stones



Photo: 8

The top stone sits on the stove.