

Technical Data Sheet

Homestead 8570 Bottom Heat Shield Installation

Kit Assembly #95-68710

Publish Date: 8/16/2002

ASSEMBLY CONTENTS:

- (1) #5930-2005 - Bottom Heat Shield
- (2) #5930-2006 - Bottom Heat Brackets
- (2) #4500-3435 – 8-32 x 3/8" Screws

TOOLS REQUIRED:

Phillips Screwdriver

PROCEDURE:

1. Clip the heat shield brackets into the slots on the bottom heat shield with the longer portion (the tab with the perforation) on the bracket extending upwards.
2. Slide the heat shield underneath the stove with the brackets upward. Line the brackets up with the pre-existing holes on the left and right side of the ash dump. Affix the heat shield to the ash dump using the 2 screws provided with the kit.

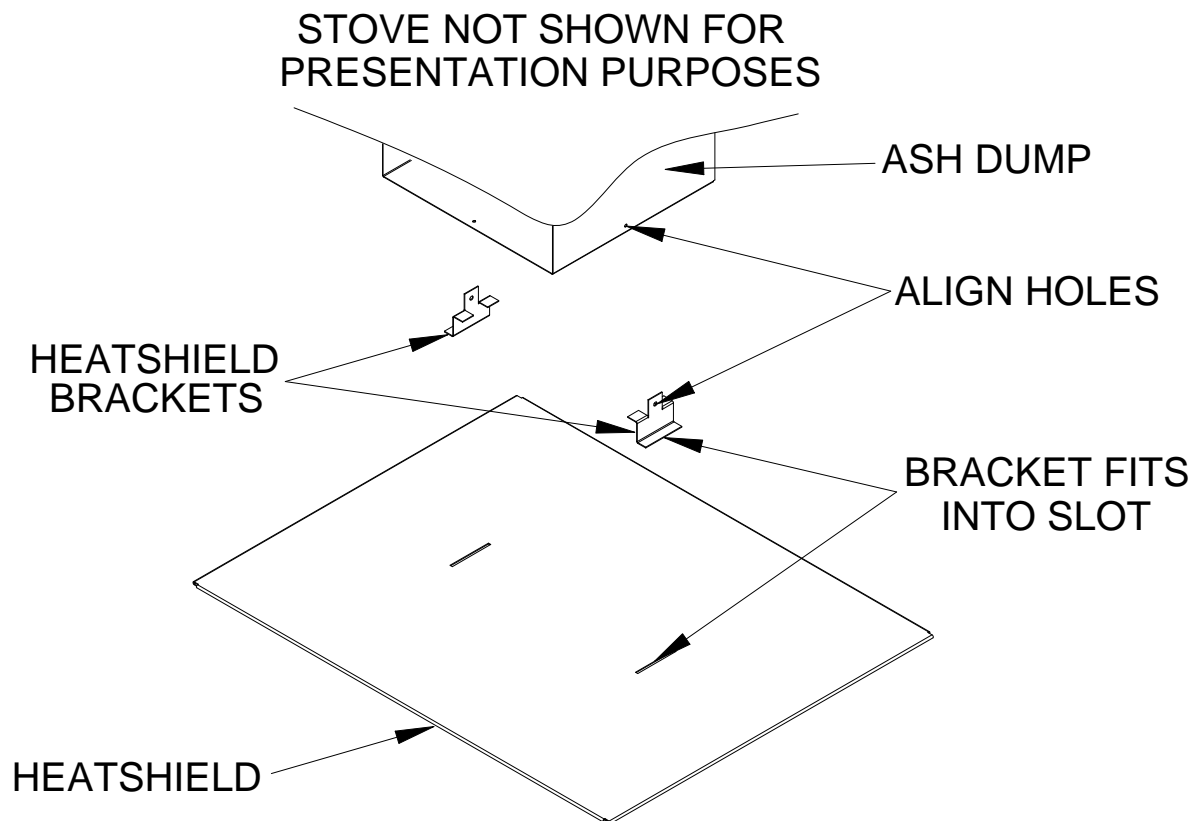


Figure 1