

Technical Data Sheet

Installation of the Sterling-BV G 8521 & Sterling-DV G 8531 Front Door Screen

Assembly 95-7200

Date: 12/31/2002

Page: 1 of 2

Note: Installation of this screen eliminates the need for the floor protection otherwise required in front of the heater.

KIT CONTENTS:

- 1-Screen #5501-703
- 1-Label #3300-135
- 1-Screw #4500-2165 (10-24x1-3/8" pan black oxide)


TOOLS REQUIRED:

Phillips head screwdriver

BEFORE YOU BEGIN: Turn the valve control to the off position. Work only on a cold stove.

PROCEDURE:

- 1) Using a Phillips screwdriver, remove and discard the screw from stove door.
- 2) Lift the door straight up and off from the stove.
- 3) Remove and discard washers that are on the hinges.
- 4) Place screen in front of the door and place the hinge pins through both.
- 5) Place screen and door on the front door frame, allow the hinge pins to fall through the door, the screen, and into the frame.
- 6) Close door and replace door screw with the one provided with the screen.
- 7) Attach label as noted in illustration on the back of this page.

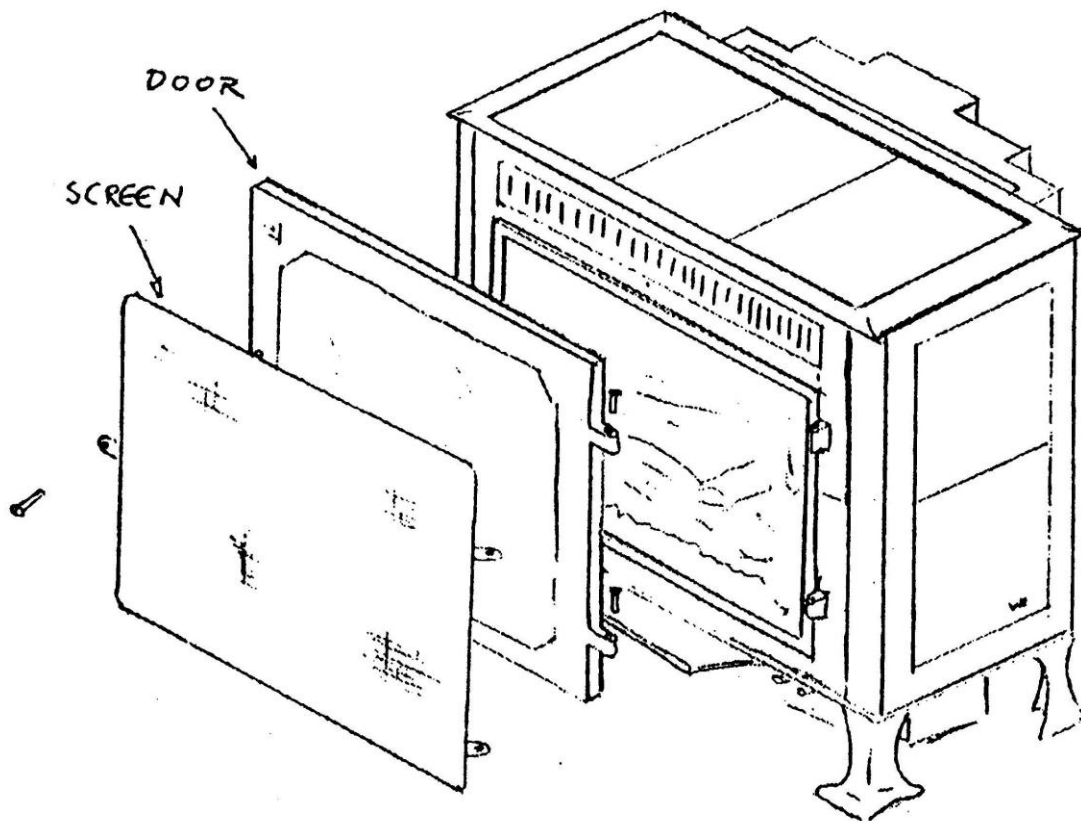

Install the screen label above product information label on back of stove.

label

THIS STOVE HAS BEEN FITTED WITH A FRONT DOOR
SCREEN (ITEM NO. 95-57200). IF THIS SCREEN IS
REMOVED A HEARTH PAD MAY BE REQUIRED. SEE
HEARTH REQUIREMENTS SECTION OF OWNERS MANUAL.
3300-135

