

Technical Data Sheet

Bristol DX 8762 Screen Installation

Kit #97-59100

Publish Date: 05/13/2010

MATERIALS REQUIRED:

- 1- Front Screen
- 2- Side Screens

TOOLS REQUIRED:

None

PROCEDURE:

1. Remove the top casting (lift off) and lay it face down on a clean work surface.

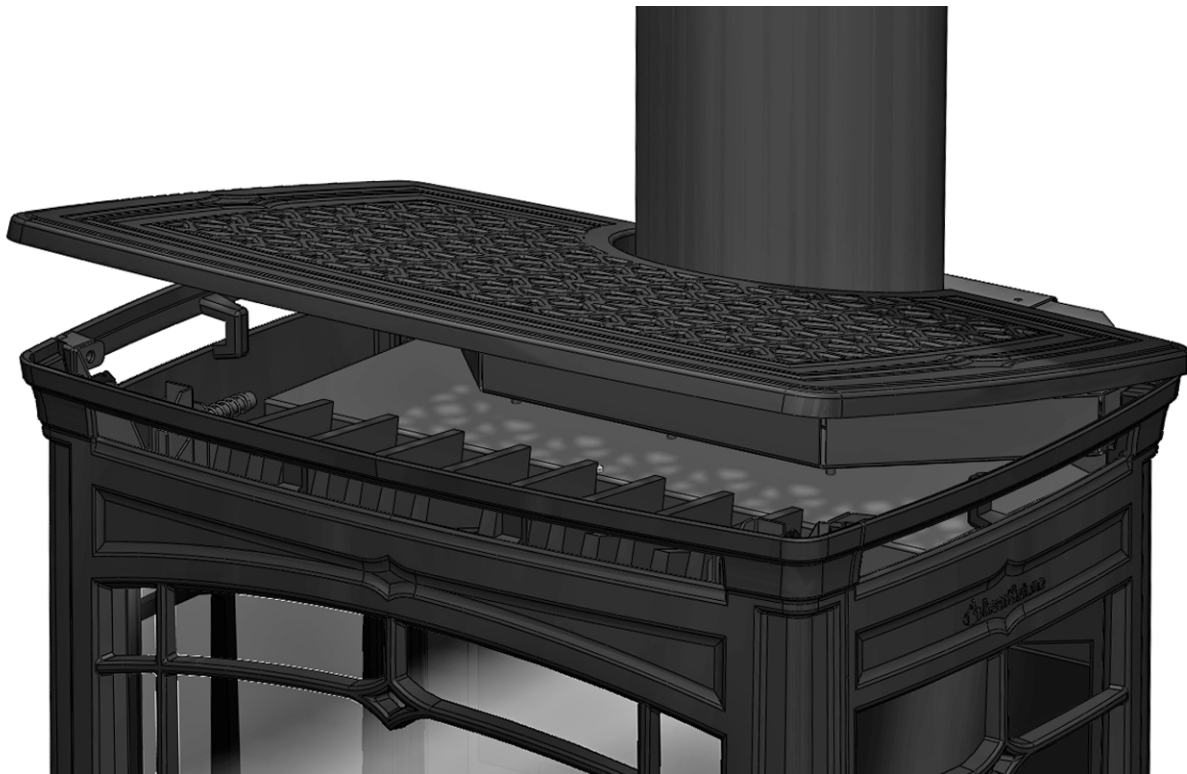


Figure 1

2. You should not need to remove the cast front façade or side panels. Carefully insert the lower edge of each screen into the space between the glass assembly, and the front façade or side panel.
3. Slide the screen down until the bent upper edge rests on the firebox. Ensure the screens are centered, and level.
4. Re-install the top casting.