

Technical Data Sheet

Log Replacement Instructions

Fits Stove 8321 and Tucson 8701

Kit #93-66210N

INCLUDED:


Log: 7211-518 Bottom Left
Log: 7211-519 Bottom Right
Log: 7211-520 Top Left
Log: 7211-521 Top Right

TOOLS REQUIRED:

Pair of Work Gloves
Slotted Screwdriver

BEFORE YOU BEGIN: *Always work on a cool stove.* Read the instructions thoroughly before starting the repair. Identify all parts included in the kit. Report any shortages to your dealer. Save the embers from the original log set for reuse.

POCEDURE:

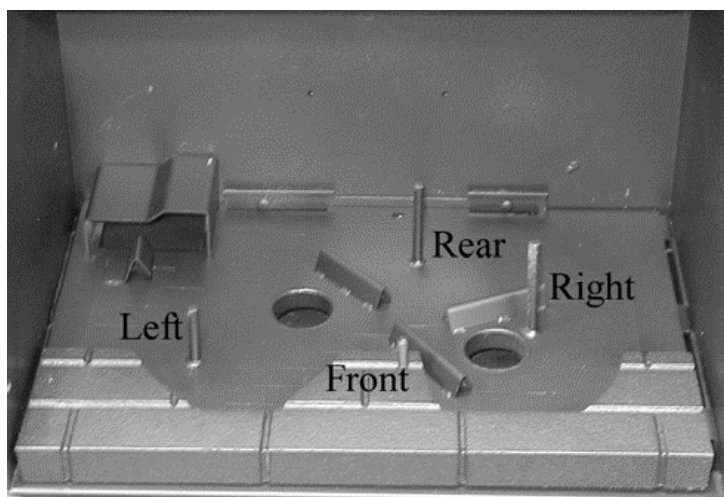

1. Pull off the glass frame by prying up the two metal clips on top of the firebox with a flat blade screwdriver. Carefully pull the front off the stove and set it aside.
2. Remove the packaging material around the logs. Identify the four mounting posts as shown in the photo above.
3. Place the Forked Log (1) onto the right and rear posts as shown below.



4. Gently slide the “Cordwood” style log (2) onto the rear post as shown below.



5. Gently place the Straight Log (3) onto the onto the right and front posts as shown above.
6. Gently place the Top Log (4) in the indentation on the Cordwood Log (2). Be sure the right end is placed onto the rear corner of the firebox, as shown below.





7. Place the embers evenly across the pan burner; one layer high. Do not block the air opening under the cast brick panel in any way.
8. Replace the glass frame by sliding it down the face of the firebox and pushing the top edge back. Slide the clips back down to hold the frame in place.