

Technical Data Sheet

Green Mountain 20 8620: Side Heatshield Installation

Assembly 96-68205

INCLUDED IN KIT:


(1) 5960-020 Side Heat Shield

TOOLS REQUIRED:

Phillips Screw Driver

Before You Begin: Only work on a cool stove.

This heatshield can be installed on either the right or left of the stove. Both sides of the stove can be equipped with this heatshield to reduce the clearances to combustibles on both sides of the stove. The side heatshield can also be coupled with the rear heatshield (96-68200) to reduce side and rear clearances if necessary.

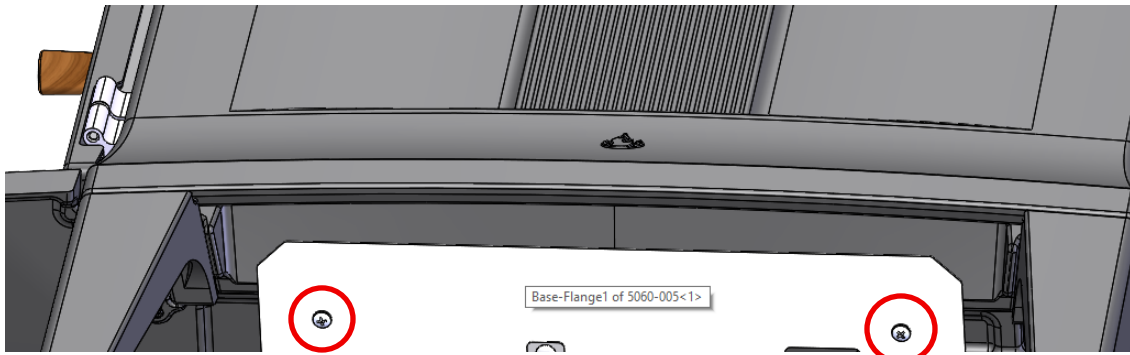

1. First, locate and loosen the two side phillips screws securing the bottom shield to the stove.
2. Next, hook the top edge of the heatshield under the rim of the cast iron top.
3. Finally, line up the two slots in the bottom flange of the heat shield with the screws loosened in Step 1. Slide the bottom flanges between the screws and bottom heatshield and tighten the screws to secure the shield in place.

