



Technical Data Sheet

Universal Valve Conversion to LP

Part #7211-320


Publish Date: 4/24/2007

INCLUDED IN KIT:

7211-320: Universal Valve
LP Sticker (Red)

TOOLS REQUIRED:

5/32" (4 mm) Allen Wrench

 **CAUTION:** Turn off the gas supply to the valve before conversion. If the stove is equipped with a blower, disconnect it from the electrical source before making this conversion.

 **WARNING**

A QUALIFIED GAS SERVICE AGENCY MUST PERFORM THIS CONVERSION IN ACCORDANCE WITH THE MANUFACTURER'S INSTRUCTIONS, AND ALL APPLICABLE CODES AND REQUIREMENTS OF THE AUTHORITY HAVING JURISDICTION. IF THE INFORMATION IN THESE INSTRUCTIONS IS NOT FOLLOWED EXACTLY, A FIRE, EXPLOSION, OR PRODUCTION OF CARBON MONOXIDE MAY RESULT CAUSING PROPERTY DAMAGE, PERSONAL INJURY, OR LOSS OF LIFE. THE QUALIFIED SERVICE AGENCY PERFORMING THIS WORK ASSUMES RESPONSIBILITY FOR THE PROPER CONVERSION OF THIS APPLIANCE WITH THIS PART.

 **ATTENTION**

CET ÉQUIPEMENT DE CONVERSION SERA INTALLÉ PAR UNE AGENCE QUALIFIÉE DE SERVICE CONFORMÉMENT AUX INSTRUCTIONS DU FABRICANT ET TOUTES EXIGENCES ET CODES APPLICABLES DE L'AUTORISÉS AVOIR LA JURIDICTION. SI L'INFORMATION DANS CETTE INSTRUCTION N'EST PAS SUIVIE EXACTEMENT, UN FEU, EXPLOSION OU PRODUCTION DE PROTOXYDE DE CARBONE PEUT RÉsulTER LE DOMMAGES CAUSER DE PROPRIÉTÉ, PERTE OU BLESSURE PERSONNELLE DE VIE. L'AGENCE QUALIFIÉE DE SERVICE EST ESPONSABLE DE L'INSTALLATION PROPRE DE CET ÉQUIPEMENT. L'INSTALLATION N'EST PAS PROPRE ET COMPLÈTE JUSQU'À OPÉRATION DE L'APPAREIL CONVERTI EST CHÉQUE SUIVANT LES CRITÈRES ÉTABLIS DANS LES INSTRUCTIONS DE PROPRIÉTAIRE PROVISIONNÉES AVEC L'ÉQUIPEMENT.

PROCEDURE:

1. If necessary, remove the valve from the stove. Working on the Hi/Lo knob, pry off the black cap on the face of the knob (see Figure 1).

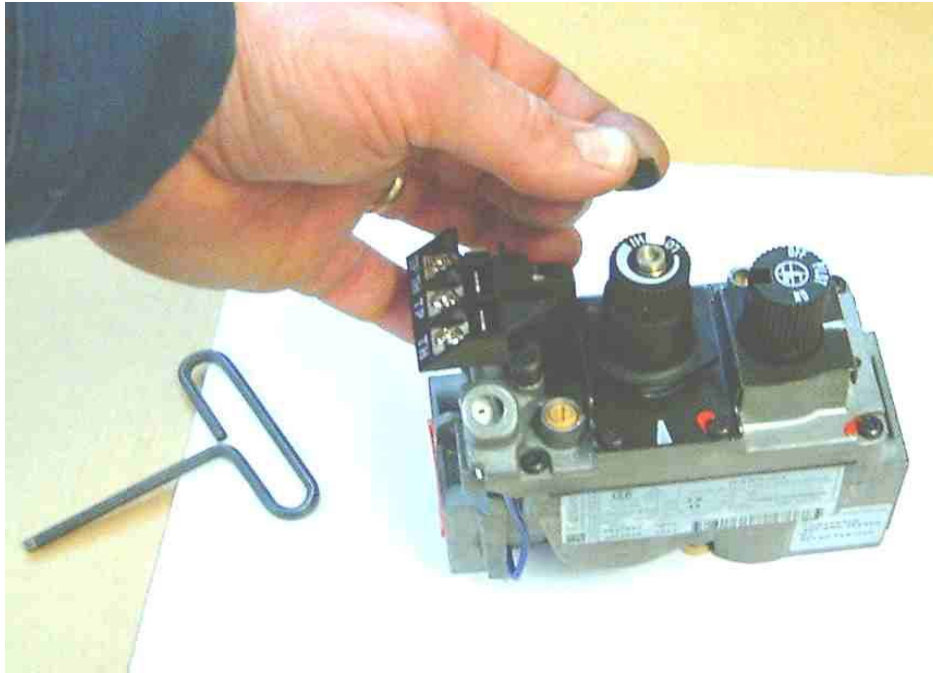


Figure 1 - Remove the cap by prying it up with finger.

2. Using the 4 mm allen wrench, remove the conversion plug that is inside the knob (see Photo #2).

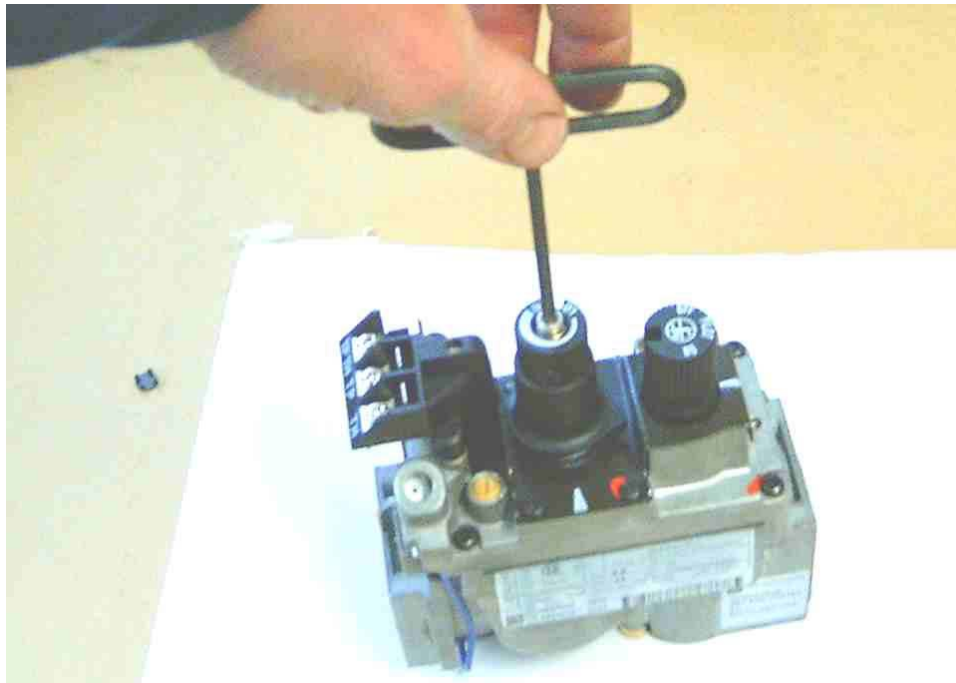


Figure 2 - Loosen and remove the conversion plug with the allen wrench.

3. Rotate the conversion plug and turn it back into the knob. Turn the plug in with the allen wrench until it is snug – be careful not to use excessive force, as this could damage the plug.

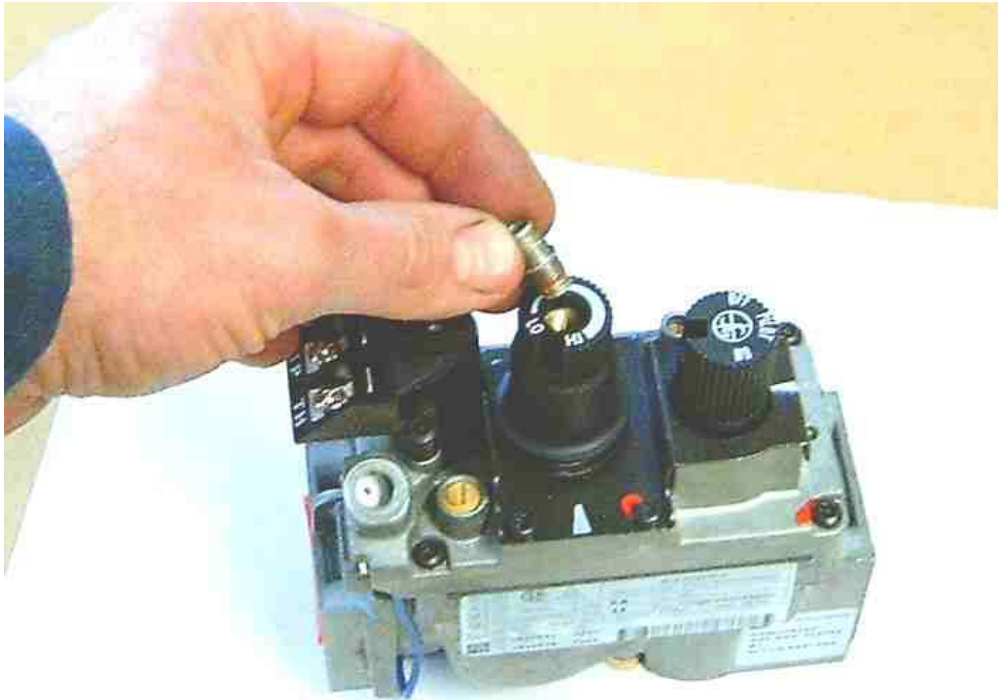


Figure 3 - Rotate the plug 180 degrees and turn it back into the valve. Snug with allen wrench.

🔥 NOTE: When converted to LP, you will see the red ring on the conversion plug after it is installed.

4. Place the red LP sticker onto the lighting instructions. These are located on the back of the lab plate attached to the stove.
5. Replace the black cap on top of the conversion plug.
6. If this is a replacement valve, ensure a leak test is conducted after installation, and before burning the stove.