

Technical Data Sheet

KIT #93-56907

Tucson DV 8700, Tucson BV Model 8720, or Stowe DV Model 8320
Conversion From Natural Gas (NG) to Liquid Propane (LP)

TOOLS REQUIRED

Phillips Screwdriver
Slotted Screwdriver
Straight Handled T20 Torx
1/2" Deep Socket or Wrench
3" Socket Extension (optional)
10mm Open End Wrench
11mm Open End Wrench
5-32 Allen Wrench

KIT COMPONENTS

1-LP Valve Conversion Kit
1-#53 Burner Orifice
1-#35 Pilot Orifice
LP Sticker (Red)
Instructions
Conversion Label

NOTE: Some Valves may require a tamper proof T20 Torx

!!WARNING!!

This conversion kit must be installed by a qualified gas service agency in accordance with the manufacturer's instructions and all applicable codes and requirements of the authority having jurisdiction. If the information in these instructions is not followed exactly, a fire, explosion, or production of carbon monoxide may result causing property damage, personal injury, or loss of life. The qualified service agency performing this work assumes responsibility for the proper conversion of this appliance with this kit.

!!ATTENTION!!

Cet équipement de conversion sera installé par une agence qualifiée de service conformément aux instructions du fabricant et toutes exigences et codes applicables de l'autorisés avoir la juridiction. Si l'information dans cette Instruction n'est pas suivie exactement, un feu, explosion ou production de protoxyde de carbone peut résulter le dommages causer de propriété, perte ou blessure personnelle de vie. L'agence qualifiée de service est esponsable de l'installation propre de cet équipement. L'installation n'est pas propre et complète jusqu'à opération de l'appareil converti est chèque suivant les critères établis dans les instructions de propriétaire provisionnées avec l'équipement.

CAUTION: The gas supply must be shut off prior to making this conversion. If the stove is equipped with the optional blower, disconnect it from the electrical source before making this conversion.

IMPORTANT: DO NOT attempt this conversion on a Vent Free Tucson.

PROCEDURE:

- 1) Open the front of the stove. For the Tucson use a phillips screwdriver to remove the screw that holds the front door closed. For the Stowe, use the allen wrench provided or a standard 5-32 allen key to remove the 4 bolts in the front facade. Note: some early models will have phillips screws holding the front on. You will need to drop the ash lip down to remove the 2 lower bolts. Carefully hold the facade as the top 2 bolts are removed. Lift the facade off and place it in a safe place until it is required for reassembly.
- 2) Carefully remove the log set and the burner tube. Refer to the illustration at right and note the positions of the firebox components. Before the conversion is complete verify that all components are placed correctly.
- 3) Using a 1/2" deep socket with a 3" extension (or 1/2" wrench), remove the NG gas orifice(#40), located on the inside of the back of the firebox. Install the LP orifice(#53). To prevent damage to the main gas line, hold the elbow, which the orifice is attached to when removing and installing the orifices.
- 4) Locate the pilot assembly inside the stove. Remove the two Phillips screws that hold the pilot base to the bottom of the firebox. Carefully lift the pilot assembly up into the firebox, just high enough to expose the attachments underneath (taking care not to kink the thermocouple tube, chafe the thermopile wire and to avoid damage to the gasket between the base of the pilot and the firebox.
- 5) Using a 10mm metric wrench, remove the nut that holds the flexible pilot line to the base. Tap the top of the pilot assembly until the NG orifice drops out. Place the LP orifice (#35) directly onto the pilot line. Tighten with the 10mm wrench.
- 6) Push the pilot assembly back down into its original position and secure it with the previously removed screws. Check to make sure the igniter wire is still firmly connected to the ceramic igniter. The connection can be verified by observing a spark when the ignition button is depressed.
- 7) Adjust the air shutter on the end of the burner tube so that it is fully open. Tighten the retaining screw to hold the shutter in this position.
- 8) Replace the burner tube, logs, ember screen, and embers. Refer to the owner's manual for the proper placement of these parts. Precise location is important to both the look and operation of the stove. Replace and secure the front door (Tucson) or Glass front (Stowe).


NOTE: The remainder of this conversion will be done to the valve and pilot assembly underneath the stove. Access can be increased by placing the stove on a raised surface or by blocking the unit up.

VALVE CONVERSION: See illustrations on page three.

- 9) Using a Torx T20, or slotted screwdriver, remove and discard the three pressure regulator mounting screws (A), pressure regulator tower (B) and diaphragm (C).
- 10) Insure that the rubber gasket (D) is properly positioned and install the new HI/LO pressure regulator assembly to the valve using the new screws (E) supplied with the kit. Tighten screws securely.
- 11) Install the enclosed identification label (F) to the valve body where it can be easily seen. Place the red LP sticker over the white NG sticker on the valve door.
- 12) Turn on the gas supply. For checking and properly adjusting the manifold pressure, refer to the appliance owner's manual for instructions.

LEAK TEST BEFORE AND AFTER LIGHTING THE STOVE.

The input rate of the heater can be verified by checking the manifold pressure. If the manifold pressure is correct, then the input rate is correct.

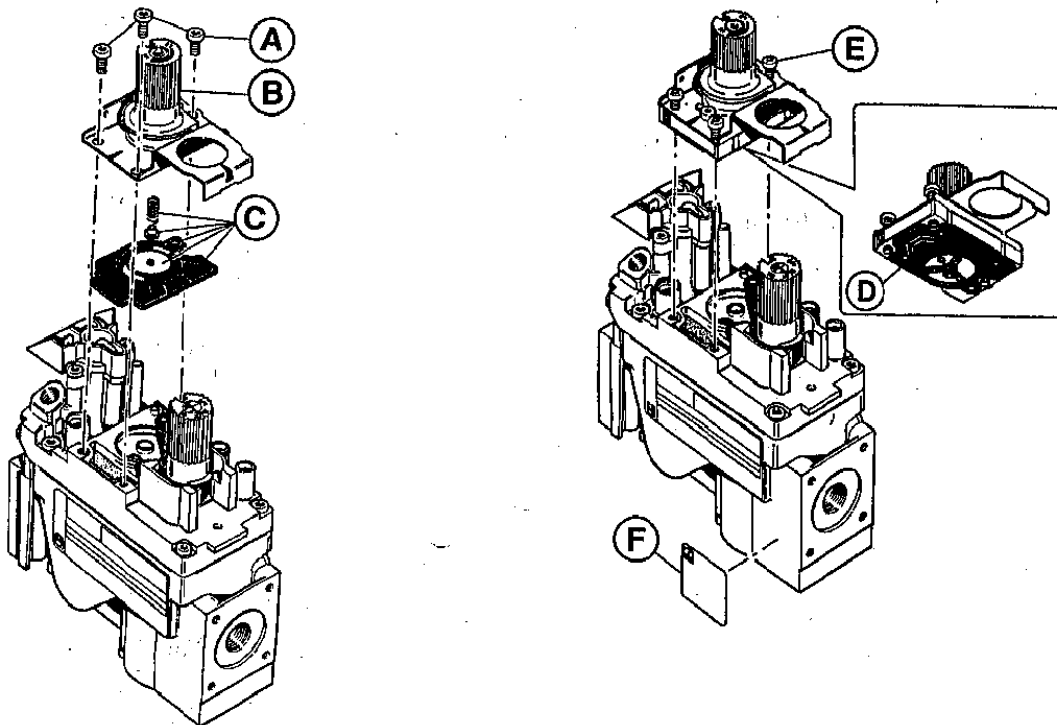

13) Record this change by filling out the label included in kit. Attach to the back of the stove.

	<u>Natural Gas</u>	<u>LP</u>
Input rating (Btu/hr) 0-610 m	26,000	26,000
Maximum output (BTU/hr) 0-610 m	20,000	20,500
Minimum input rating (Btu/hr) 0-610	14,700	14,700
Orifice size DMS 0-610 m	40	53
Input rating (Btu/hr) 610-1370 m	24,500	24,000
Orifice size DMS 610-1370 m	41	54
Manifold pressure (in. w.c./kPa)	3.5/0.9	10.0/2.5
Man. Pressure-Lo setting (in.w.c./kPa)	1.2/0.3	3.3/0.8
Minimum inlet pressure (in. W.c./kPa)	5.0/1.25	11.0/2.75
Maximum inlet pressure (in. W.c./kPa)	10.5/2.62	13.5/3.36

Note: Refer to the owner's manual for the:

- a. Details on adjustment for the proper pilot and main burner flame appearance.
- b. Instructions for checking out the normal operating sequence of the ignition system.
- c. Location on the valve to check manifold pressure.

DO NOT REUSE THE PARTS THAT HAVE BEEN REMOVED FROM THE STOVE.

WARNING: Make sure proper replacement orifices have been used.

LP ORIFICES:

	Main Burner
0 - 610m	#53 (Standard)
610 - 1370m	#54 (High Altitude)
	Pilot #35

NAT. GAS ORIFICES:

	Main Burner
0 - 610m	#40 (Standard)
610 - 1370m	#41 (High Altitude)
	Pilot #51